Era 100

概述



让超凡音效充满房间的紧凑型智能音响

- 紧凑的设计使音响能够十分美观地摆放在书架、厨房台面及床头柜上，或安装在墙壁或支架上。
- 通过Wi-Fi、蓝牙和USB-C线路输入灵活连接。
- 使用Sonos App、语音或者直观的触摸控件轻松控制。
- 将两只Era 100音响配对以获得更宽广的声场，或将两只作为后置环绕声与最新的Sonos条形音响搭配使用。
- 在准备好将Sonos Era 100添加到您的系统后，请参阅**设置**。

控件和指示灯



音量控制

- 提高音量（向右滑动，或者点按+）
- 降低音量（向左滑动，或者点按-）

注：在播放音乐时，按住+或-可快速更改音量。



播放/暂停


- 按一次可播放或暂停音频。
- 按住可以添加另一个房间正在播放的音乐。



下一首/上一首

- 按>可跳至下一首歌曲。
- 按<可转到上一首歌曲。

注：在收听电台时，您无法前进或后退。

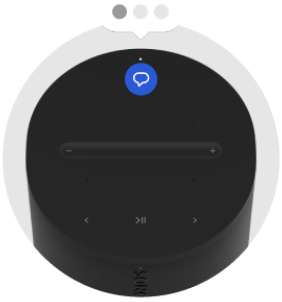

语音服务打开/关闭

按下音响顶部的麦克风图标可以打开或关闭语音服务。


- 当指示灯点亮时，语音控制可用（背面的麦克风开关也必须打开）。
- 当指示灯熄灭时，语音控制将关闭。



状态指示灯

可显示产品的Wi-Fi连接状态，并在静音状态和信号出错时提供指示。
了解详情

连接器面板

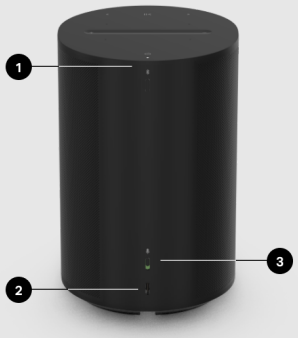

1	**蓝牙按钮**	• 按住配对新设备。 • 按一次重新连接。
2	**USB-C端口**	USB-C端口专为使用Sonos线路输入适配器或组合式适配器（单独出售）的线路输入和以太网连接而设计。它不是音响的电源，不应用于为其他设备充电。 • **以太网**：如果您想以硬接线方式连接您的音响，请使用Sonos组合式适配器和以太网线缆将Era 100直接连接到您的路由器（这在Wi-Fi不稳定的情况下非常实用）。 • **线路输入**：使用Sonos线路输入适配器或组合式适配器连接您的唱机、CD播放器或其他设备。

3	**通用麦克风开关**	切换可打开或关闭产品上的所有麦克风。 • 当开关关闭（向下）时，麦克风将被禁用，诸如Trueplay快速调音和语音服务等需要启用麦克风的功能将不可用。 • 当开关打开（向上）时，诸如Trueplay等需要启用麦克风的功能将可用。（如果产品顶部的语音服务指示灯也亮起，则可以使用语音服务。） **注**：要使用语音服务，麦克风开关和语音服务指示灯都必须点亮。

选择安放位置

您可以将音响放置在任何地方。为获得最佳性能，下面是一些指导原则：

- Era 100旨在随时随地为您提供强劲音效 – 无论放置在什么位置，无论您聆听什么内容，Trueplay调音均可呈现平衡的音效。
- 将Era 100靠墙放置或摆放在搁板上时，为获得最佳性能，请在音响背部留出至少2.5厘米（1英寸）的空间。
- 如果您使用Era 100作为环绕声，请在每个音响周围至少留出203毫米（8英寸）的间隙。

蓝牙配对

1. 在您的设备设置中打开蓝牙。
2. 按住音响背面的蓝牙按钮，直到听到提示音，然后松开。音响做好配对准备时，状态指示灯会呈蓝色闪烁。
3. 在蓝牙设置内，从可用设备列表中选择**Sonos Era 100**。下一次，您的移动设备将自动连接。

线路输入

将投影仪、CD播放机或唱机（带有内置前置放大器）等音频设备连接到任何配有线路输入端口的Sonos产品（Era 300、Era 100、Amp、Port或Five）。然后转至🎵 > **线路输入**以选择音源并开始播放。

注：Era 300和Era 100需要Sonos线路输入或组合式适配器（**单独出售**）。其他产品可能需要不同类型的线路输入适配器，具体取决于您的音频源。

了解详情

麦克风打开/关闭

可以通过两种方式控制Era 100的麦克风：

Era 100背面的通用麦克风开关可以打开和关闭所有麦克风。

Era 100顶部的语音服务按钮可以打开和关闭语音服务，但不会影响Trueplay和其他麦克风相关功能所需的麦克风。

- 二者均处于打开状态时，语音控制和所有需要启用麦克风的功能都将可用。
- 二者均处于关闭状态时，语音控制和所有需要启用麦克风的功能都将不可用。
- 当通用麦克风开关打开但语音服务指示灯熄灭时，Trueplay和其他需要启用麦克风的功能可用，但语音控制关闭。

语音服务

通过任何支持语音功能的Sonos产品使用语音控制Sonos系统 – 播放和控制内容、增大或降低音量等。

- **Sonos Voice Control**：以解放双手的方式和无与伦比的隐私保护控制您的整个Sonos系统。Sonos Voice Control开箱即用，在设置音响时只需短短几秒即可添加。**了解详情**
- **Amazon Alexa**：您需要使用Sonos App和已启用Sonos技能的Alexa App。设置期间，您将需要在两款App中进行一些更改。**了解详情**
- **Siri**：您需要使用Apple Home App。将兼容AirPlay 2的Sonos音响添加到Apple Home App，然后即可使用iPhone、iPad或Apple TV要求Siri播放音乐（目前仅限Apple Music）。**了解详情**

注：目前不是所有国家/地区都支持语音控制功能；Sonos和语音服务同时在您所在地区推出后，我们将尽快提供此功能。

Trueplay™

Trueplay调音可以测量声音在墙壁、家具和房间中其他表面上的反射情况，然后精细调校您的Sonos音响，确保无论音响置于何处，您都可以享受到美妙声音。

在设置期间，选择最适合您和您的空间的Trueplay选项。要在稍后重新调音，请转到**设置** > **系统**，选择一个房间，然后选择**Trueplay**。

注：如果在您的iOS设备上启用了旁白功能，则Trueplay调音功能将不可用。如果您要对音响进行调音，需要首先在设备设置中将其关闭。

高级调音

高级调音可自定义且精确地调音。它需要大约5分钟，并会使用iOS设备（运行iOS 8或更高版本）上的麦克风，因此您需要在房间内四处走动，同时声音会根据您的空间进行微调。

注：高级调音是大房间的最佳选择（开放概念空间可能会遇到调音不太精确的情况）。

快速调音

快速调音快速、轻松且易于访问。快速调音需要大约一分钟的时间，并会使用Sonos产品上的麦克风来检测环境，因此在调音期间无需在房间内四处走动。

注：快速调音适用于iOS和Android，对于较小的房间或不方便走动的空间来说是不错的选择。

自适应Trueplay调音

诸如Sonos Roam和Move等便携式Sonos产品可以自动调音。自适应Trueplay会使用音响的麦克风检测环境以定期进行调音，无论音响摆放在何处，无论您聆听哪些内容，都能为您呈现出色音效。

前往⚙ > **系统**，然后选择您的便携式音响以开启自适应Trueplay调音。

设置立体声对

可以在同一房间里配对两个Sonos音响来获取更广的立体声体验。一个音响用作左声道，另一个用作右声道。

注：立体声对中的Sonos音响必须相同。

1. 两个音响的间距在2.4米到3米（8至10英尺）之间。您选定的收听位置与这些配对的音响之间的距离应当为2.4到3.6米（8到12英尺）；距离较近会增强低音效果，较远则能增强立体声场。

2. 前往⚙ > **系统**。

3. 选择您要在立体声对中使用的音响之一，然后选择**设置立体声对**以开始。**了解详情**

设置环绕声

可轻而易举地将两只Sonos音响（同一型号）组合或将一只Sonos Amp与您喜爱的非Sonos音响组合，分别用作家庭影院的左声道和右声道。

1. 请将每只环绕声音响放置在距离您最喜欢的聆听位置约3米（10英尺）处，并将它们朝着座位方向摆放。
2. 前往⚙ > **系统**。
3. 选择条形音响所在房间，然后选择**添加环绕声**以开始。

注：如果创建房间群组或创建立体声对，您就不会获得环绕声。

了解详情

环绕声设置

设置过程中，会针对您的房间优化环绕声。这些设置可以调整：

环绕声	**打开**或**关闭**环绕声。.
电视音量	调整电视音频的环绕声音量。
音乐音量	调整音乐的环绕声音量。
音乐播放	**氛围**（轻柔）或**全频**（响亮、全频）。不适用于杜比全景声音乐播放。

产品设置

您可以针对自己的环境定制Sonos产品。前往⚙ > **系统**，然后选择产品。

房间名称	如果将音响移到了一个新的房间，您可以在**设置**中为其更改名称。
关闭Wi-Fi （不适用于便携式产品, Era 100, 或 Era 300）	使用以太网线缆将音响连接到您的网络时，您可以关闭音响的Wi-Fi。这能够降低功耗，并可以改善某些有线音响的连接质量。 对于Amp和Port等产品，将其置于机架内或叠放时，关闭Wi-Fi可降低内部温度。 当您使用以太网线缆连接Sonos组合式适配器时，Era 100和Era 300的Wi-Fi会被关闭。 **了解详情**
EQ	有些产品发货时已进行均衡预设。您可以更改声音设置（低音、高音、平衡或响度），使其符合您的个人偏好。**了解详情**
Trueplay	Trueplay调音功能可以根据周围环境和内容调音。便携式产品可以自动调音。**了解详情**
音量限制	您可以为每个房间设置最大音量。**了解详情**
状态指示灯	可显示音响的Wi-Fi连接状态，并在静音状态和信号出错时提供指示。**了解详情** **注**：如果灯光对您产生干扰，您可以在**设置**中将其关闭。

触控	您可以在音响上禁用触控。有时您需要禁用此功能，以防小朋友或宠物意外播放或调整音量。**了解详情**
节电模式 **（仅限便携式产品）**	要节省电池电量，您可以将便携式音响设置为自动关机而非进入睡眠状态。在重新开机之前，它将不会显示在Sonos App中。
线路输入 **（适用于支持线路输入的Sonos产品）**	当投影仪、唱机、立体声音响或其他音频设备连接到Sonos产品时，您可以调整这些线路输入设置： • **源名称**：为线路输入设备选择一个名称。 • **源级别**：如果您发现默认音量设置过低或者过高，请调整线路输入源级别。 • **音频延迟**：在线路输入源和Sonos之间添加延迟，以便在分组的音响上播放线路输入音频时降低出现音频问题的概率。 • **自动播放**：如果您希望线路输入音频在Sonos检测到线路输入端口上的信号时自动开始播放，请选择一个房间。（自动播放默认禁用。）

配件

为您的Sonos系统寻找完美的配件——专为您的Sonos产品量身定制。
要了解适配Sonos产品的所有精选落地支架、壁挂支架、充电器和线缆，请在我们网站上查看**配件**。

Era 100落地支架

为Sonos Era 100定制设计的落地支架可以将音响牢固地固定到位。

- 固定高度，特别适合家庭影院环绕声音响。
- 轻松组装。
- 立杆中的通道可以隐藏音响电源线，可供方便地理线。

注：要了解适配Sonos产品的所有精选落地支架、壁挂支架、充电器和线缆，请在我们网站上查看**配件**。

包装清单

每个Sonos Era 100落地支架都包括：

- 1个落地支架底座
- 1个落地支架杆
- 1个音响平台
- 1个落地支架杆帽
- 安装套件，包含3颗螺丝（2颗长螺丝，1颗短螺丝），1个垫圈

注：Sonos音响单独销售。

所需物品


- 十字头螺丝刀

设置

1


从箱子中取出所有东西，并将底座放在包装槽中进行固定，以便用于后续步骤。将连接到音响的Sonos Era 100电源线的末端穿过落地支架底座上的开口并穿入杆的线槽中。

小心：此落地支架仅适用于Sonos Era 100。

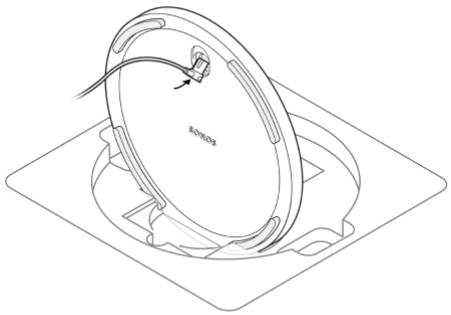


2

放置垫圈，使定位销朝内。然后使用定位销将落地支架杆与底座对齐。

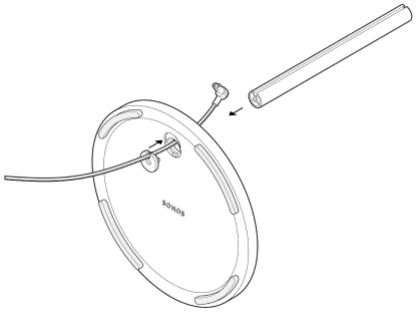


3

用1个长螺丝（随附）和十字螺丝刀将底座（带垫圈）固定到落地支架杆上。确保电源线仍然可以自由滑动。

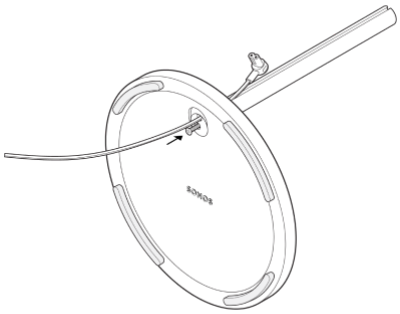

4

用定位销将音响平台放置在杆上，然后用另一颗长螺丝（随附）将音响平台安装到落地支架杆上。

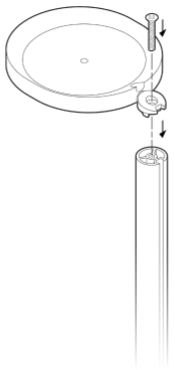

5

将电源线插入音响，然后将电源线从上到下整齐地压入杆上的线槽中。




6

用短螺丝（随附）将音响安装到平台。




7

将杆帽装到落地支架杆顶部，以隐藏电源线。

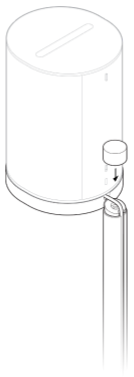

8

将音响插入电源插座，然后将多余的电源线塞入底座下方。

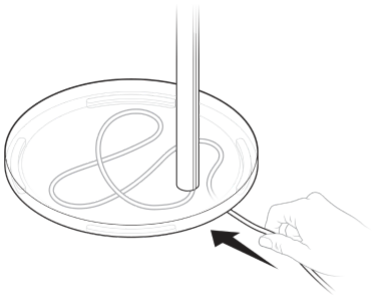

Era 100壁挂支架

- 适用于Sonos Era 100的易于安装的壁挂支架。
- 可承托并固定音响。
- 不妨碍操作端口、按钮和触摸控件，并可让您工整地整理音响的线缆。
- 灵活放置音响来获得最佳音效。

重要说明：此支架旨在搭配Sonos Era 100以竖立方式安装，因为音响的声学和无线性能已针对标准桌面放置方向进行优化。

包装清单

每个定制设计的Sonos Era 100壁挂支架均包含：

- 1个壁挂支架
- 1个壁挂托架
- 2个石膏板预埋件
- 安装套件，包含3颗螺丝（2颗长壁挂托架螺丝，1颗短音响壁挂支架螺丝）

注：Sonos音响单独销售。


所需物品

- 铅笔
- 水平仪
- 十字头螺丝刀

设置


1

使用水平仪将托架靠在墙上，确保其对齐并标记螺丝孔的位置。移除托架。

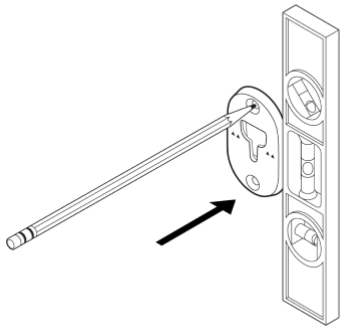


2

如果您使用墙壁预埋件，请使用5/16英寸钻头钻出2个导孔，从顶部的导孔开始。然后，插入预埋件。（如果您在木头或塑料上钻孔，请勿使用墙壁预埋件。）
如果您不使用墙壁预埋件，请找到墙体立柱，并用9/64英寸钻头钻出导孔。

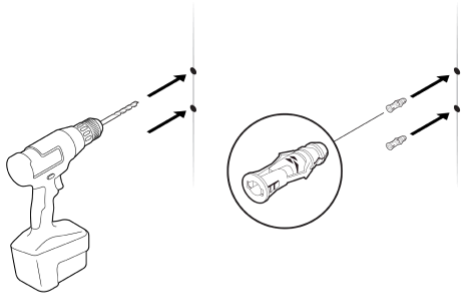


3

将托架靠在墙上，箭头朝上。用2个长的壁挂托架螺丝（随附）和电钻或十字螺丝刀将其固定。将顶部螺丝拧入一半。将底部螺丝完全拧入，然后拧紧顶部螺丝。

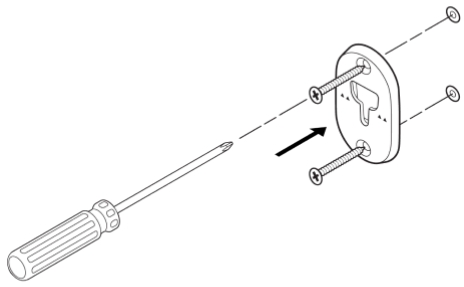


4

将电源线穿过壁挂支架背面的开口并插到音响上。

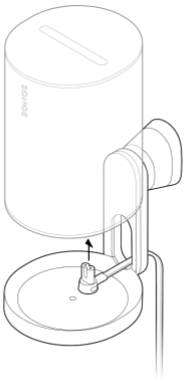

5

将音响旋转180度，使螺丝孔朝上。用1个短的音响壁挂支架螺丝（随附）将音响安装到壁挂支架上。

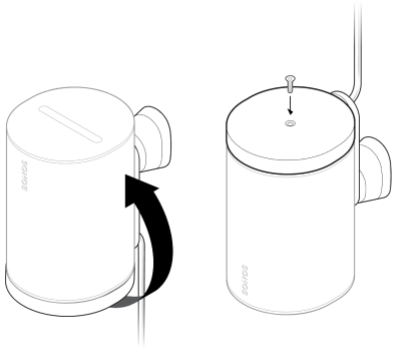


6

将壁挂支架与托架锁眼对齐，向下滑动壁挂支架并将其锁定到位。在将手移开之前，确保壁挂支架和音响已牢牢固定。



7

要进行调整以获得最佳音效，请将壁挂支架上的卡箍逆时针旋转90°，使音响解除锁定。重新定位音响，然后将卡箍顺时针旋转90°以锁定。

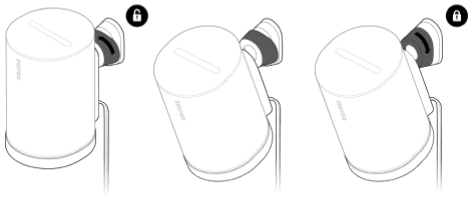

规格

功能	说明
音频	
放大器	三个D类数字放大器。
高音扬声器	两个成角度的高音扬声器可以保证清晰、准确的高频响应和左右分离的感觉。
低音扬声器	一个中低音扬声器确保您能够听到忠于原声的中频回放以及深沉丰富的低音。
立体声对	将两只音响变成分离的左右声道音响，打造更宽广、更深沉的音效。
家庭影院	添加两只Era 100音响作为环绕声，打造逼真的环绕立体声效果。
麦克风	• 远场麦克风阵列 • 可以使用音响背面的麦克风开关关闭所有麦克风，包括语音控制。

功能	说明
语音控制	• 集成语音控制。支持Amazon Alexa和Sonos Voice Control。 • 当语音控制指示灯熄灭时，语音助手不会倾听，但其他麦克风相关功能（如Trueplay快速调音）仍处于激活状态。
可调整EQ	使用Sonos App调节低音、高音和响度。
Trueplay™	此软件可测量房间的声学结构，然后对EQ进行精细调校。兼容iOS和Android设备。（麦克风开关必须处于开启状态。）
电源/连接性	
Wi-Fi	**使用Sonos S2**：使用任何支持802.11a/b/g/n/ac/ax 2.4/5 GHz广播功能的路由器连接到Wi-Fi。
蓝牙	蓝牙5.0支持从任何支持蓝牙的设备流式传输音频。 按下蓝牙按钮可与蓝牙设备配对。
电源	自动切换，100 - 240V，50-60 Hz，1A交流通用插头。

功能	说明
USB-C端口	一个USB-C端口。 • 使用辅助线缆和Sonos线路输入适配器连接音频源。 • 使用以太网线缆和Sonos组合式适配器连接您的路由器。（所有配件均单独出售。）
CPU	四核 1.4 GHz A-55
内存	1GB SDRAM 8GB NV
Sonos S2	使用最新一代Sonos App设置和控制。
线路输入	使用Sonos线路输入适配器，可以通过3.5毫米音频线路输入接口（适配器单独出售）连接您的设备。
Apple AirPlay 2	支持在运行iOS 11.4及更高版本的Apple设备上使用AirPlay 2控制。
详细信息/尺寸	
尺寸（高 x 宽 x 厚）	182.5 x 120 x 130.5毫米/7.18 x 4.72 x 5.13英寸

功能	说明
重量	2.2千克/4.85磅
工作温度	0ºC到40ºC/32ºF到104ºF
存储温度	-20ºC到70ºC/-4ºF到158ºF
防潮	采用耐高湿设计，可在装有淋浴器的浴室等环境中使用。（不具备防水或抗水性能。）
表面工艺	白色外壳配有白色格栅；黑色外壳配有黑色格栅
包装清单	Sonos Era 100、2米（6英尺）电源线、快速入门指南

注：规格如有更改，恕不另行通知。

重要安全信息

1. 阅读这些说明。
2. 保留这些说明。
3. 注意所有警告。
4. 遵循所有说明。
5. 请勿在水附近使用本设备。
6. 只能用软干布清洁本设备。家用清洁剂或溶剂可能会损坏Sonos产品的表面。
7. 切勿堵塞任何通风口。按照制造商说明进行安装。
8. 切勿将本设备安装在热源（例如散热器、热暂存器、炉子）或其他会产生热的装置附近。
9. 防止电源线被踩到或夹到，尤其要小心保护插头、电源插座及其在本设备上的出口点。
10. 只使用厂家指定的附件/配件。
11. 雷雨天气或长期不使用本设备时，应拔出其电源插头。
12. 本产品没有任何可由用户维修的零件。请勿打开、拆卸或者尝试修理本产品，也不要更换任何组件。本设备的一切维修应由具有资质的Sonos维修人员执行。如果本设备受到任何损坏，需对其进行维修。损坏情况包括：电源线或插头损坏；有液体渗入或有异物落入到本设备中；本设备接触到雨水或湿气，不能正常工作，或被摔落。
13. 电源插头应能随时从插座拔出。
14. **警告**：为降低火灾或触电风险，切勿让本设备接触到雨水或湿气。
15. 不要让本设备接触到滴落物或溅出物，不要将装有液体的物体（例如花瓶）放在本设备上。
16. 本设备与外部设备之间的连接必须使用屏蔽线缆，以符合FCC无线电频率发射限制。

Era 100



Overview



The compact smart speaker designed for room-filling sound

- Compact design fits beautifully on bookshelf, kitchen counter, nightstand, or mounted to a wall or stand.
- Flexible connectivity with WiFi, Bluetooth®, and USB-C line-in.
- Easy control using the Sonos app, your voice, or the intuitive touch controls.
- Pair two Era 100 speakers for an even wider soundstage, or use two as rear surrounds with the latest Sonos soundbars.
- See **Setup** when you’re ready to add a Sonos Era 100 to your system.

Control and lights



Volume control

- Volume up (slide right or tap **+**)
- Volume down (slide left or tap **-**)

Note: When music is playing, press and hold **+** or **-** to quickly change the volume.



Play/Pause


- Press once to play or pause audio.
- Press and hold to add the music that’s playing in another room.



Next/Previous

- Press **>** to skip to the next song.
- Press **<** to go to the previous song.

Note: You can’t skip forward or go back when listening to a radio station.

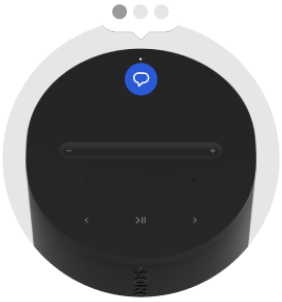

Voice services on/off

Press the microphone icon on top of the speaker to turn voice services on or off.


- When the indicator light is on, voice control is available (the microphone switch on the back must also be on).
- When the indicator light is off, voice control is off.



Status light

Displays the product's connection to WiFi, indicates when the volume is muted, and signals errors.
Learn more

Connector panel

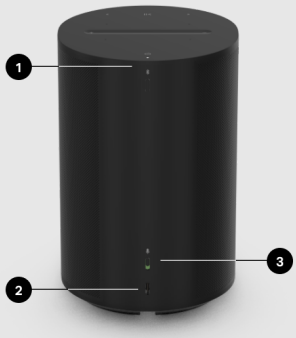

1	**Bluetooth button**	• Press and hold to pair a new device. • Press once to reconnect.

2	**USB-C port**	The USB-C port is designed for line-in and Ethernet connections using the Sonos Line-In Adapter or Combo Adapter (sold separately). It's not a power source for the speaker and shouldn't be used to charge other devices. • **Ethernet**: Use the Sonos Combo Adapter and an Ethernet cable to connect Era 100 directly to your router if you want to hardwire your speaker (helpful if your WiFi is unstable). • **Line-in**: Use either the Sonos Line-In Adapter or Combo Adapter to connect your turntable, CD player, or other device.

3	**Universal microphone switch**	Toggle to turn all product microphones on or off. • When the switch is off (down), the microphones are disabled so microphone-enabled features like Trueplay quick tuning and voice services are unavailable. • When the switch is on (up), microphone-enabled features like Trueplay are available. (Voice services are available if the voice services indicator light on top of the product is also on.) **Note**: To use voice services, both the microphone switch and the voice services indicator light must be on.

Select a location

You can put your speaker just about anywhere. For the best performance, here's a few guidelines:

- Era 100 is made to give you powerful sound anywhere—Trueplay tuning balances the sound for wherever it's placed, and whatever you're listening to.
- When Era 100 is placed next to a wall or on a shelf, leave at least 1" (2.5 cm) of space around the back of the speaker for best performance.
- If you're using Era 100 speakers as surrounds, leave at least 8" (203 mm) clearance around each speaker.

Bluetooth pairing

1. Turn Bluetooth on in your device settings.
2. Press and hold the Bluetooth button on the back on the speaker until you hear a tone, then release. The status light blinks blue when the speaker is ready to pair.
3. Choose **Sonos Era 100** from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect next time.

Line-in

Connect an audio device, like a projector, CD player, or turntable (with a built-in phono preamp), to any Sonos product that has a line-in port (Era 300, Era 100, Amp, Port, or Five). Then go to 🎵 > **Line-In** to select the source and start playback.

Note: Era 300 and Era 100 require a Sonos Line-In or Combo Adapter (**sold separately**). Other products may require a different type of line-in adapter depending on your audio source.

Learn more

Microphone on/off

There are two ways to control the microphones on Era 100:

A universal microphone switch on the back of Era 100 turns all microphones on and off.

A voice services button on top of Era 100 turns voice services on and off without affecting the microphones needed for Trueplay and other microphone-dependent features.

- When both are on, voice control and all microphone-enabled features are available.
- When both are off, voice control and all microphone-enabled features are unavailable.
- When the universal microphone switch is on and the voice services light is off, Trueplay and other microphone-enabled features are available but voice control is off.

Voice services

Use your voice to control your Sonos system with any voice-enabled Sonos product—play and control content, turn the volume up or down, and more.

- **Sonos Voice Control**: control your whole Sonos system with hands-free ease and unmatched privacy. Sonos Voice Control comes ready to use—it only takes a few seconds to add when you set up your speakers. **More information**
- **Amazon Alexa**: you'll need the Sonos app and the Alexa app with the Sonos skill enabled. You'll make some changes in both apps during setup. **Learn more**
- **Siri**: you'll need the Apple Home app. Add your AirPlay2-compatible Sonos speakers to the Apple Home app and then use an iPhone, iPad, or Apple TV to ask Siri to play music (currently limited to Apple Music). **Learn more**

Note: Voice control isn't supported in every country yet—this feature will be available as soon as Sonos and a voice service launch together in your region.

Trueplay™

Trueplay tuning measures how sound reflects off walls, furnishings, and other surfaces in a room, then fine tunes your Sonos speaker to make sure it sounds great no matter where you place it.

During setup, choose the Trueplay option that works best for you and your space. To retune later, go to ⚙ > **System**, choose a room, and select **Trueplay**.

Advanced tuning

Advanced tuning is custom and precise. It takes about 5 minutes and uses the microphone on an iOS device (running iOS 8 or later) so you'll move around the room while the sound is fine tuned for your space.

Note: Advanced tuning is the best choice for large rooms (open concept spaces may experience less precise tuning).

Quick tuning

Quick tuning is fast, effortless, and accessible. It takes about a minute and uses the microphone on your Sonos product to detect the environment so there's no need to move around the room during tuning.

Note: Quick tuning is available for both iOS and Android, and is a good choice for smaller rooms, or spaces where it's difficult to move easily.

Auto Trueplay

Portable Sonos products like Sonos Roam and Move can tune themselves automatically. Auto Trueplay uses your speaker’s microphone to detect the environment and make periodic tuning adjustments so you get great sound wherever your speaker is and whatever you're listening to.

Go to ⚙ > **System**, and select your portable speaker to turn on auto Trueplay.

Set up stereo pair

Pair two Sonos speakers in the same room for an even wider, stereo experience. One speaker serves as the left channel and one serves as the right channel.

Note: The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 8 to 10 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
2. Go to ☼ > **System**.
3. Select one of the speakers you want to use in the stereo pair, then choose **Set Up Stereo Pair** to get started.

Learn more

Set up surrounds

It’s easy to turn two Sonos speakers (same model), or a Sonos Amp and your favorite non-Sonos speakers, into separate right and left channels for your home theater.

1. Place each surround speaker about 10 ft from your favorite listening position, angling them toward the seating area.
2. Go to ☼ > **System**.
3. Select a room with a soundbar and choose **Add Surrounds** to get started.

Note: If you group the rooms or create a stereo pair instead, you won't have surround sound.

Learn more

Surround audio settings

During setup, surround sound is optimized for your room. These settings are adjustable:

Surrounds	Turn surround sound **On** or **Off**.
TV Level	Adjust surround volume for TV audio.
Music Level	Adjust surround volume for music.
Music Playback	**Ambient** (subtle) or **Full** (louder, full range). Doesn't apply to Dolby Atmos Music playback.

Product settings

You can customize Sonos products for your surroundings. Go to ☼ > **System** and select a product.

Room Name	If you move your speaker to a new room, you can change its name in **Settings**.
Turn off WiFi (not available for Sonos Era 100, Era 300, or portable products)	You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for wired speakers. For products like Amp and Port, turning off WiFi can reduce the internal temperature when they're placed in a rack or stacked. **Learn more** **Note:** WiFi is turned off for Era 100 and Era 300 when you connect a **Sonos Combo Adapter** using the Ethernet cable.
EQ	Sonos products ship with preset equalization settings. You can change the sound settings (bass, treble, or loudness) to suit your personal preferences. **Learn more**
Trueplay	Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. **Learn more**

Volume Limit	You can set a maximum volume for each room. **Learn more**
Status Light	Displays the speaker’s connection to WiFi, indicates when the volume is muted, and signals errors. **Learn more** **Note**: If the light is distracting, you can turn it off in **Settings**.
Touch Controls	You can disable the touch control on your speaker. You may want to do this to prevent a child or curious pet from accidentally adjusting playback or volume. **Learn more**
Battery Saver (portable products only)	To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it’s powered back on.

Line-In

(Sonos products with line-in capability)

When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings:

- **Source name**: Choose a name for the line-in device.
- **Source level**: Adjust the line-in source level if you find the default volume setting is too quiet or distorted.
- **Audio Delay**: Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers.
- **Autoplay**: Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port.

Accessories

Find the perfect accessory for your Sonos system—tailored to perfectly fit your Sonos products.
For a full selection of Sonos-compatible stands, wall mounts, chargers and cables, see **Accessories** on our website.

Era 100 Stand

Custom designed stand for Sonos Era 100 holds speaker securely in place.

- Fixed height, optimal for home theater surrounds.
- Easy assembly.
- Channel in the pole hides the speaker’s power cable for simple cable management.

Note: For the full selection of Sonos-compatible stands, wall mounts, and cables, see **Accessories** on our website.

What's in the box?

Each Sonos Era 100 Stand assembly includes:

- 1 stand base
- 1 stand pole
- 1 speaker platform
- 1 stand pole cap
- Mounting kit with 3 screws (2 long, 1 short), 1 washer

Note: Sonos speakers sold separately.

What you'll need


- Phillips-head screwdriver

Set it up

1


Take everything out of the box and place the base in the packaging slot to stabilize it for the next few steps. Thread the end of the Sonos Era 100 power cord that attaches to the speaker through the opening in the stand base and into the pole channel.

Caution: This stand is intended only for use with Sonos Era 100.

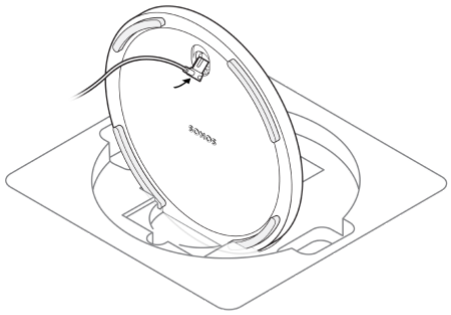


2

Position the washer with the alignment pins facing in. Then align the stand pole with the base, using the alignment pins to guide you.

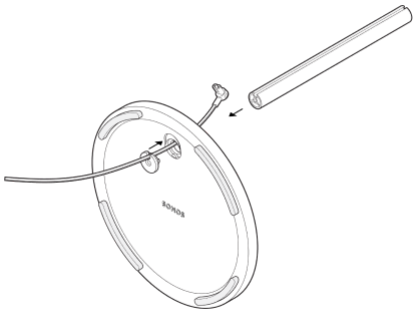


3

Fasten the base (with the washer) to the stand pole using 1 long screw (included) and a Phillips-head screwdriver. Make sure the cord can still slide freely.

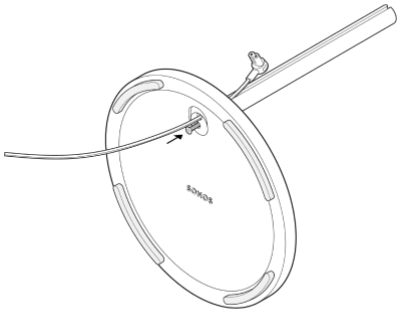

4

Use the alignment pins to position the speaker platform on the pole, then attach the speaker platform to the stand pole using the other long screw (included).

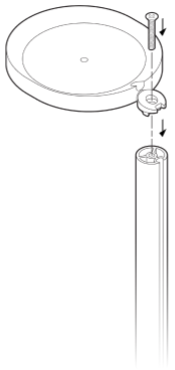


5

Bring the power cord up to the speaker and plug it in, then neatly press the power cord into the cable channel on the pole, working from top to bottom.




6

Attach the speaker to the platform using the short screw (included).

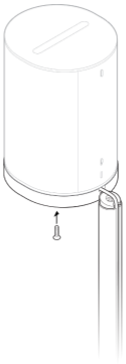


7

Snap the pole cap onto the top of the stand pole to hide the power cord.

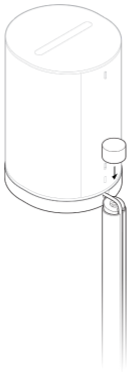

8

Plug the speaker into a power outlet, then tuck the excess cord under the base.

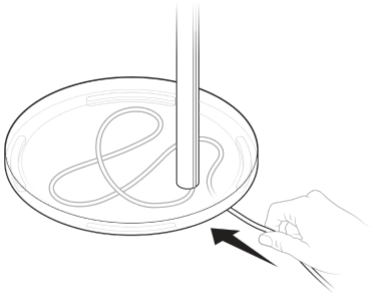

Era 100 Wall Mount

- The easy-to-install mount for Sonos Era 100.
- Supports the weight of your speaker and secures it in place.
- Allows access to ports, buttons, and touch controls, and cleanly routes your speaker’s cable.
- Flexibility to position your speaker for best sound.

Important: This mount is intended for use with Sonos Era 100 in a vertical orientation, as the acoustic and wireless performance of the speaker has been optimized for a standard table-top orientation.

What's in the box?

Each custom-designed Sonos Era 100 wall mount assembly includes:

- 1 wall mount
- 1 wall bracket
- 2 drywall anchors
- Mounting kit with 3 screws (2 long wall bracket screw, 1 short speaker mount screw)

Note: Sonos speakers sold separately.


What you’ll need

- Pencil
- Level
- Phillips-head screwdriver

Set it up


1

Place the bracket against the wall using a level to make sure it’s aligned, and mark the screw holes. Remove the bracket.

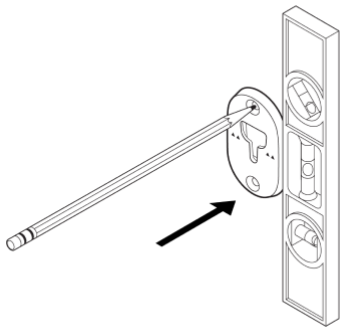


2

If you’re using wall anchors, use a 5/16" drill bit to drill 2 pilot holes, starting with the hole on the top. Then insert the wall anchors. (Don’t use wall anchors if you’re drilling into wood or plastic.)
If you’re not using wall anchors, locate a wall stud and drill the pilot holes with a 9/64" bit.

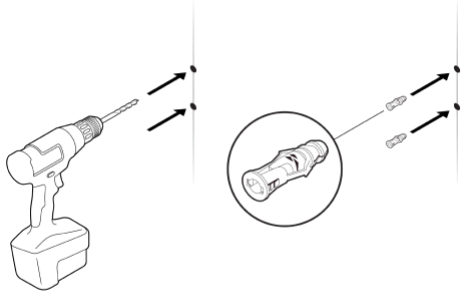


3

Place the bracket against the wall with the arrows facing up. Secure it using 2 long wall bracket screws (included) and a power drill or Phillips-head screwdriver. Drive the top screw in halfway. Drive the bottom one in all the way, then tighten the top screw.

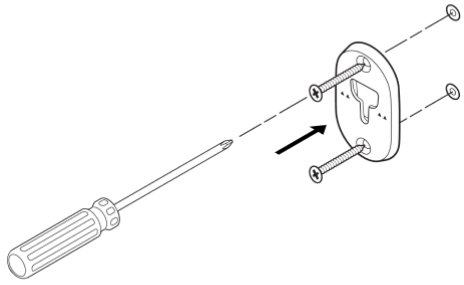


4

Thread the power cord through the opening at the back of the mount and plug it into the speaker.

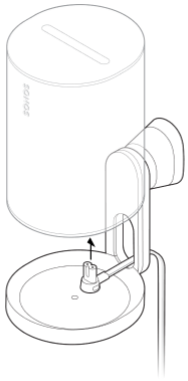

5

Rotate the speaker 180 degrees so the screw hole is facing up. Attach the speaker to the mount using 1 short speaker mount screw (included).

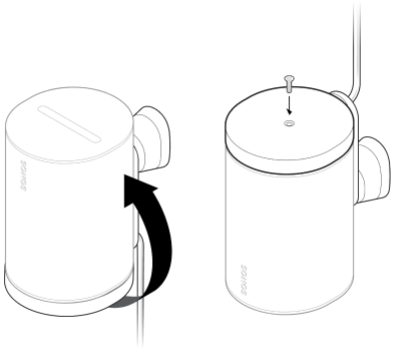


6

Align the mount with the bracket keyhole, slide the mount down, and lock it into place. Make sure the mount and speaker are securely seated before removing your hand.



7

To adjust for optimal sound, unlock the speaker by rotating the collar on the mount 90° counterclockwise. Reposition the speaker, then rotate the collar 90° clockwise to lock.

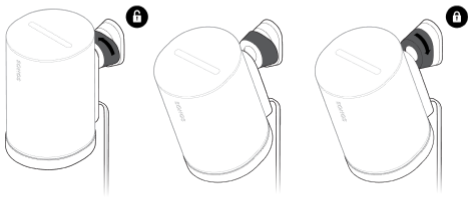

Specifications

Feature	Description
AUDIO	
Amplifier	Three Class-D digital amplifiers.
Tweeter	Two angled tweeters create a crisp and accurate high frequency response and a separated sense of right and left.
Woofer	One mid-woofer ensures the faithful playback of mid-range vocal frequencies plus deep, rich bass.
Stereo pair	Turn two speakers into separate left and right channel speakers to create wider, deeper sound.
Home theater	Add two Era 100 speakers as surrounds for a true surround sound experience.
Microphones	• Far-field microphone array • All microphones, including voice control, can be turned off using the microphone switch on the back of the speaker.

Feature	Description
Voice control	• Integrated voice control. Works with Amazon Alexa and Sonos Voice Control. • When the voice control indicator light is off, voice assistants are not listening but other microphone-dependent features like Trueplay Quick Tuning are still active.
Adjustable EQ	Use the Sonos app to adjust bass, treble, and loudness.
Trueplay™	This software measures the acoustics of the room then fine-tunes the EQ. Compatible with iOS and Android devices. (Microphone switch must be on.)
POWER / CONNECTIVITY	
WiFi	**Using Sonos S2**: Connects to WiFi with any 802.11a/b/g/n/ac/ax 2.4/5 GHz broadcast-capable router.
Bluetooth	Bluetooth 5.0 supports audio streaming from any Bluetooth enabled device. Press the Bluetooth button to pair with a Bluetooth device.

Feature	Description
Power supply	Auto-switching 100 - 240V ~ 50-60 Hz 1A AC universal input.
USB-C port	One USB-C port. • Connect an audio source using an auxiliary cable and the Sonos Line-In Adapter. • Connect your router with an Ethernet cable and the Sonos Combo Adapter. (All accessories sold separately.)
CPU	Quad Core 1.4 GHz A-55
Memory	1GB SDRAM 8GB NV
Sonos S2	Set up and control with the latest generation of the Sonos app.
Line-in	With a Sonos Line-In Adapter, you can connect your devices through a 3.5 mm audio line-in connection (adapter sold separately).
Apple AirPlay 2	Works with AirPlay 2 on Apple devices iOS 11.4 and higher.

Feature	Description
DETAILS / DIMENSIONS	
Dimensions (H x W x D)	7.18 x 4.72 x 5.13 in / 182.5 x 120 x 130.5 mm
Weight	4.85 lb / 2.2 kg
Operating temperature	32º to 104º F / (0º to 40º C
Storage temperature	-4º to 158º F / -20º to 70º C
Humidity-resistant	Designed to withstand high humidity, like in a bathroom with a running shower. (It is not waterproof or water-resistant.)
Product finish	White with white grille; black with black grille
Package contents	Sonos Era 100, 6 ft (2 m) power cable, Quickstart Guide

Note: Specifications subject to change without notice.

Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. **Warning**: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.

16. Connections between this device and external equipment must be made using a shielded cable in order to maintain compliance with FCC radio frequency emission limits.